

USE OF THE SAFE

Never close the safe the first time without programming your personal code.

CODE PROGRAMMING 1- Door

OPEN, Press the red button inside the door then release.

2- A "BEEP" sounds

3- Choose and dial a 3 to 8 digit code.

4- Confirm by pressing the **B key** 5- Don't

forget to write it down somewhere immediately, otherwise you won't be able to open the chest.

CLOSING THE TRUNK 1- Put

your personal items in the trunk.

2- Close the door and turn the rotary handle to the **left**.

3- Wait a few seconds, the trunk is closed

TRUNK OPENING

1- Enter the **code** you have defined and confirm it with the **A key**

2- The green LED lights up

3- Turn the rotary handle to the **right** to open the safe

You must open the chest within 5 seconds. After this time, the safe locks again automatically.

EMERGENCY OPENING

In case of forgotten code or malfunction, please contact **SOPHIE**,